

**User Manual ► FEISOL CT-3371 / CT-3471 Tripods****A. Mount and center column installation**

For exchanging either mounts (ball head mount / center column mount / leveling base) on the tripod, unscrew the three counter-sunk screws with the delivered Allen key. Using care to tighten the screws.



## B. Installation of the Ball head

After locking the center column friction tightly, screw the ball head clockwise onto the screw of the mount, by using one hand to hold the center column, and the other hand to tighten the ball head.



## C. Adjustable tension of the leg:

Insert the included hexagonal wrenches into the two screws at the base of the leg (see picture) and tighten or loosen them to the desired friction, turning the wrenches in opposite.



#### D. Spike Installation

Remove the rubber cap on the end of legs by inserting a wooden stick or similar object between the rubber cap and the aluminum ring at the end of the leg. By pushing forward and around the ring, the rubber cap can be removed. Then the spike can be attached and locked tightly into place with the included wrench.

